

WHITE KNUCKLE



OFF ROAD PRODUCTS®

OFF ROAD VEHICLE BODY PROTECTION

RAM 2500/3500 Gas – Power Wagon 2014-Newer

Thank you for choosing White Knuckle Rock Sliders

Please read instructions before beginning installation. Check hardware kit contents against content list below. Also, check the tools needed against the list below.

Install time: 2-3 hours

1 helper recommended

Hardware Kit

- 1-Driver Side Rock Slider
- 1-Passenger Side Rock Slider
- 2 – 1/2" X 4 X 9-9/16" Backing Plates (Front)
- 2 – 1/2" X 2 X 9-11/16" Backing Plates (2nd)
- 3 – 1/2" X 2 X 9-7/16" Backing Plates (3rd & Rear)
- 1 – 3/8" X 2 X 9-7/16" Backing Plates (Driver Rear)
- 2 – 1/8" X 2 X 9-7/16" Shims (3rd Mount) 19-Newer or if needed
- 2 – 1/2" X 4-1/2" Grade 8 Bolts with Nylock Nut and Flat Washers
- 18– 1/2" X 5" Grade 8 Bolts, Nuts, Flat Washers, and Lock Washers
- 1 – 3/4" X 1' X 3" Adhesive Spacer
- 2 – Adhesive Zip Tie Mounting Base and Zip Ties

Tools Needed

- Floor Jack
- 2 Axle Stands
- 3/4" Wrench and/or Ratchet and 3/4" Socket
- Slotted Screwdriver

INSTALLATION INSTRUCTIONS

1. Chock your wheels to prevent your truck from rolling. Begin with the passenger side as it is the easier of the two sides.
2. Remove the plastic trim at the bottom of the bed at the front (2019-Newer) **Figure 1**.
3. Place the axle stands directly under the rocker panel. Place the rock slider on the axle stands **Figure 2**. Place another axle stand or floor jack under one of the mounting plates or legs to keep the slider from swinging out and to provide more stability.
4. **Passenger Side:** One plastic snap-in fastener that attaches an insulated line will need to be removed from the top of the frame near the 4th mount **Figure 3**.
5. **Driver Side** – A few of the plastic snap-in fasteners that attach the wire loom to the top of the frame rail will need to be removed or cut to provide slack in the wire loom which will allow the backing plates in the Front and 2nd positions to be installed **Figure 4**. The fasteners can be removed with a slotted screwdriver. Be sure the wire loom and hardlines are protected from wear if against the backing plates with rubber and/or electrical tape.
6. A hardline plastic bracket on the frame next to the gas tank between the 3rd and Rear mounts will need to be pried out of the frame with the slotted screwdriver and the 3/4" X 1" spacer is to be placed between the bracket and the frame **Figure 5**. This is to keep the hardlines from rubbing on the backing plates.

7. Position the rock slider mounting plates flush against the frame so that they are in a position high enough to push the bolts from the outboard toward the inboard of the vehicle frame and through the backing plate. **NOTE:** Slide the backing plates up from the bottom against the inside of the frame to ensure brake lines, wiring, etc. will not be pinched by the backing plate **Figure 6**. Next, push the bolts through the holes in the mounting plates (begin with the Front mount then work your way back). **NOTE for Front Mount:** The top bolts should be installed reversed from the inboard side of the frame to the outboard side of the frame **Figure 7**. Do not tighten at this point. **NOTE:** The two 4-1/2" bolts are for the 2nd mount on both the driver and passenger sides at the top position and should be installed reversed from the inboard side of the frame to the outboard side of the frame **Figure 8**. **NOTE:** Two 1/8" shims are provided for the 2019 and newer models to go between the 3rd mounting plate and the frame if needed **Figure 9**.
8. Once all the washers and nuts have been started on the bolts, center the slider relative to the rocker panel. Allow the top bolts rest on the top of the frame and keep a consistent gap (around 1/2" to 1") between the slider and the bottom of the rocker panel. The gap can be adjusted by simply lifting one end (a bottle jack or floor jack used under the mount to be adjusted works best). Tighten all the nuts rotating from top to bottom to ensure the backing plate stays straight. Finally, recheck each for tightness. Torque value is about 60 ft lbs for the 1/2" bolts. **NOTE for Front Mount:** Place a large slotted screwdriver between the top of the backing plate and the bottom of the body to create a gap while tightening the bolts.
9. Install the provided wire loom zip tie mounts and zip ties to the wire loom where it will be safe from rubbing.
10. **NOTE:** The temporary removal of the floor bins at the center mounting position of the sliders as well as the gas tank skid plate may save time and allow for more space to work but is not necessary to install the sliders.
11. **NOTE:** If you notice a creaking sound while driving, it is most likely the top of the front position backing plate making contact with the bottom of the cab. Loosen the bolts and drop the backing plate until it does not make contact. Place a slotted screwdriver between the top of the plate and the cab to create a gap, retighten the bolts, then remove the screwdriver.

Figure 1



Figure 2



Figure 3



Figure 4

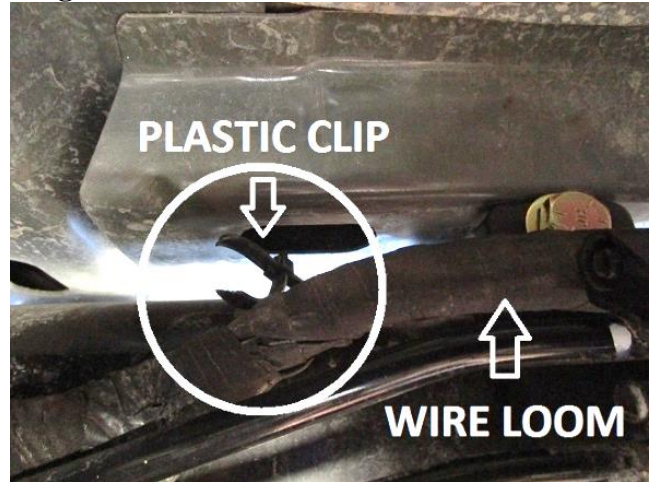


Figure 5



Figure 6



Figure 7



Figure 8



Figure 9



SAFETY FIRST

Observe proper safety procedures during installation. Improperly used tools and unsafe procedures can cause injury or death. Refer to manufacturers manuals for use and warnings of tools to be used. Modifications to your vehicle can cause dangerous conditions. The buyers and users of this product assume all risks associated with the installation and use of this product. All installations should be made by a qualified mechanic.

DISCLAIMER

White Knuckle Off Road Products, LLC stands behind all of our quality off-road fabricated products. White Knuckle Off Road Products, LLC will not be held responsible nor will we accept liability for failure of parts as a result of extreme off-road use. Minor modifications may be required to allow the installation of our products. Modifications to your vehicle using products manufactured by White Knuckle Off Road Products, LLC may create dangerous conditions. Modifications to your vehicle are done at your own risk. White Knuckle Off Road Products, LLC will not accept responsibility or liability from damage or personal injury caused by installing or using installed products manufactured by White Knuckle Off Road Products, LLC whether intended or unintended. The buyer/user accepts all responsibility and risks associated with any modifications and use of White Knuckle Off Road Products, LLC manufactured products. All products manufactured by White Knuckle Off Road Products, LLC are for off-road use only.

POWDER COAT FINISH

The powder coat finish provided by White Knuckle Off Road Products, LLC will carry NO warranty or guarantee of any kind. The powder coat finish is provided as a service only. Any damage to the finish during shipping is the responsibility of the delivery company and NOT the responsibility of White Knuckle Off Road Products, LLC. Any damage incurred during shipping MUST be noted on the Bill Of Lading or to UPS at the time of delivery. The delivery companies will not honor any claims made after the product has been delivered and damage had not been noted at the time of delivery as mentioned above. Customer provided shipping is also an option. Any damage, wear, or anomalies incurred to the finish after receiving parts from White Knuckle Off Road Products, LLC are the responsibility of the buyer or user.